

FIGURE 3

ATTACH PILASTER — TYPE H/B
(Headrail Braced)

- A) Place plastic anchors into floor holes.
- B) Over each floor anchor, place in the following order:
Shoe clip and (1) "L" bracket & fasten into anchor with #14x1/4" Phillips Heat sheet metal screw.
- C) Fasten "U" brackets to pilasters at pre-drilled locations with #14x1/4" P.H. sheet metal screws.
- D) Put stainless steel shoe on pilaster.
- E) Place pilaster over "L" brackets. Fasten with one #14x1/2" P.H. sheet metal screw at each side.
- F) Fasten "U" brackets to panel pre-drilled locations with #14x1/2" P.H. sheet metal screws.
- G) Plumb pilaster, place wedge at top rear between panel and wall. Remove panel support.
- H) Repeat for each pilaster.

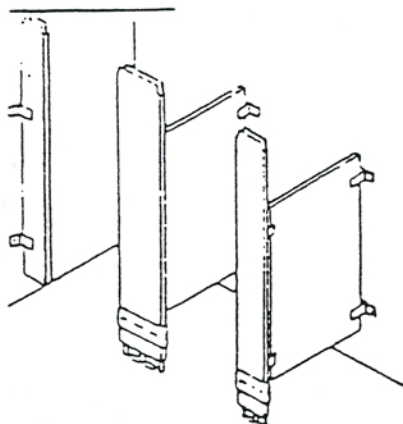


FIGURE 4

SET DOOR OPENINGS — ALL TYPES

- A) Position wall pilaster - plumb & secure
- B) Using wall pilaster as reference point, position each pilaster to required door opening and secure.
- C) Drill 11/64 holes and secure panels to wall bracket with #14x1/2" sheet metal screws.