

INSTALLATION INSTRUCTIONS

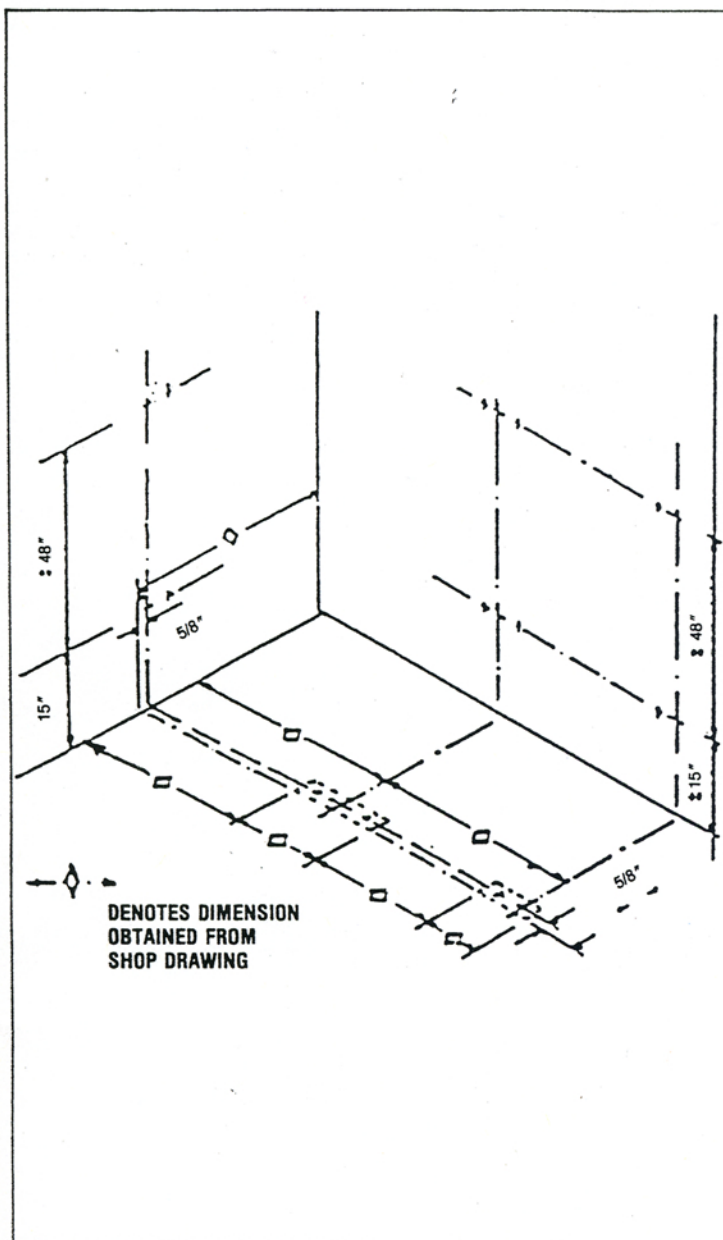


FIGURE 1

LAYOUT & MOUNTING BRACKETS

- A) Establish & mark center of pilaster location from back wall. Measure out at each end of installation.
- B) Establish & mark center lines of all top & bottom wall brackets. If possible locate in joints.
- C) From side wall & center of pilaster location, measure dimensions for floor fastenings according to shop drawings & mark. Center line of floor fastenings to be located 1 1/8" in from each edge of pilaster.
- D) Mark all bracket holes to be drilled using brackets as drilling templates.
- E) Drill 5/16" holes for wall brackets.
- F) Drill holes for floor fastenings. 5/16" for H/B, 3/4" for F/S.
- G) Insert plastic anchors into all holes.
- H) Secure wall brackets with 14 x 1 1/4" screws.

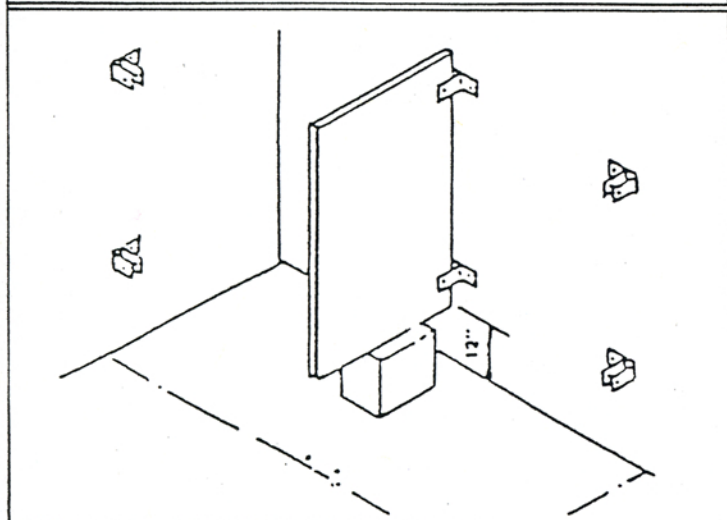


FIGURE 2

POSITION PANEL — ALL TYPES

- A) Place some type of support (12" high) in position to hold panel.
- B) Set panel on support and into wall brackets. Do not fasten panel to wall brackets.